

Electrical

Starting and Charging Circuit

Key to circuit diagram

Key	Item Description
1	Battery
2	Starter Solenoid
3	Starter Motor
4	Regulator/Rectifier
5	Fuse Box (Rear)
6	Fuse Box (Front)
7	Starter Relay
8	Engine Control Module Relay
9	Cooling Fan Relay
10	Fuel Pump Relay
11	ECM Connector B
12	ECM Connector A
13	Alarm
14	Starter Switch
15	Engine Stop Switch
16	Ignition Switch
17	Instrument Assembly
18	Immobiliser

Key to wiring colours

Key	Wiring Colour
B	Black
U	Blue
N	Brown
G	Green
S	Slate / Grey
O	Orange
K	Pink
R	Red
P	Purple
W	White
Y	Yellow
LG	Light Green
LU	Light Blue